

# MEGASCRAPER YARD SCRAPER

Owners Illustrated Instruction Book & Parts List

Grovebury Road, Leighton Buzzard, Bedfordshire. LU7 4UX. UK. Tel:01525 375157. Fax:01525 385222. Email:info@brownsagricultural.co.uk

### INTRODUCTION

Please read this booklet carefully and understand the safety warnings before operating the machine. It has been written to help you benefit from the full versatility of your Brown's machine. The machine has been designed to give many years of satisfactory service and will do so if properly fitted, used and maintained.

#### SAFETY WARNINGS


- 1. Never allow anyone to work underneath the raised machine.
- 2. Never allow anyone to stand near or behind the machine when in operation.
- 3. Always ensure that the engine is switched off before any maintenance work is carried out.
- 4. Ensure that the tractor is of a sufficient size to provide adequate stability when in operation.
- 5. Always replace broken or damaged parts immediately.
- 6. Never allow anyone to ride on the machine.
- 7. Always ensure operators are fully trained before operating machinery, ensure all Operator Manuals are readily available.
- 8. Do nor operate a machine with slipping or damaged belts.
- 9. Follow the maintenance instructions.


#### **OPERATION**


The MEGASCRAPE yard scraper comes complete with a three point linkage and a built in A Frame for attachment to the tractor three point linkage. The three point linkage pins are to fit a standard Category 1 hitch, bushes are supplied to convert to Category 2. Connect the MEGASCRAPE using this hitch system and ensure the machine is parallel to the ground.

In operation lower the MEGASCRAPE onto the ground so the scraping rubbers are in contact with the ground then either reverse or drive forward to collect the slurry. The MEGASCRAPE has a floating action with its main pivot in the middle to follow ground contours, the sides pivot round the middle and the front and rear gates can side up or down. The bottom frame is pressed down under the force of the front springs.


The maintenance required by the machine is to periodically check nuts and bolts are tight. Do not tighten the main pivot nut excessively as this will effect the sides pivoting. Also check the rubber is not excessively worn and replace as necessary.

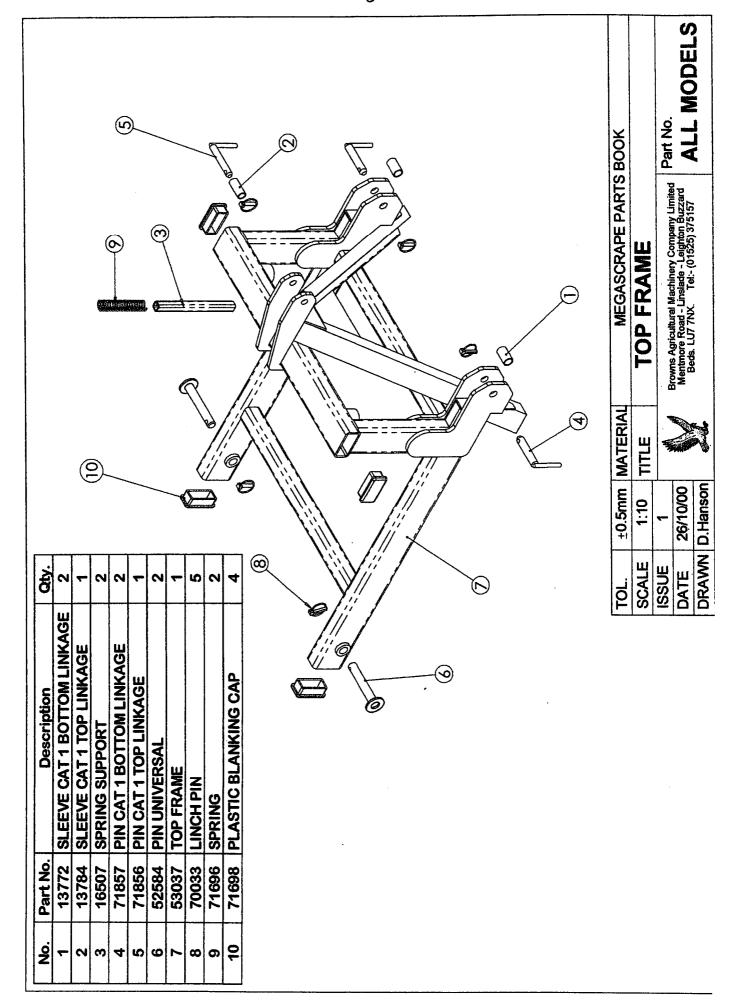


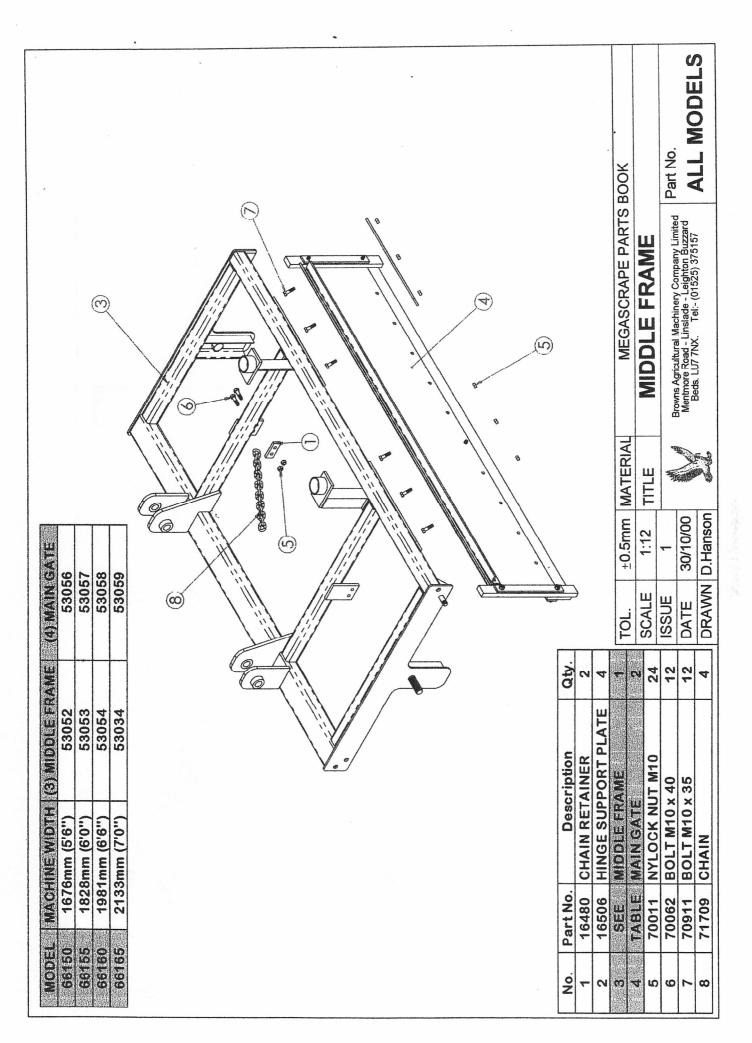


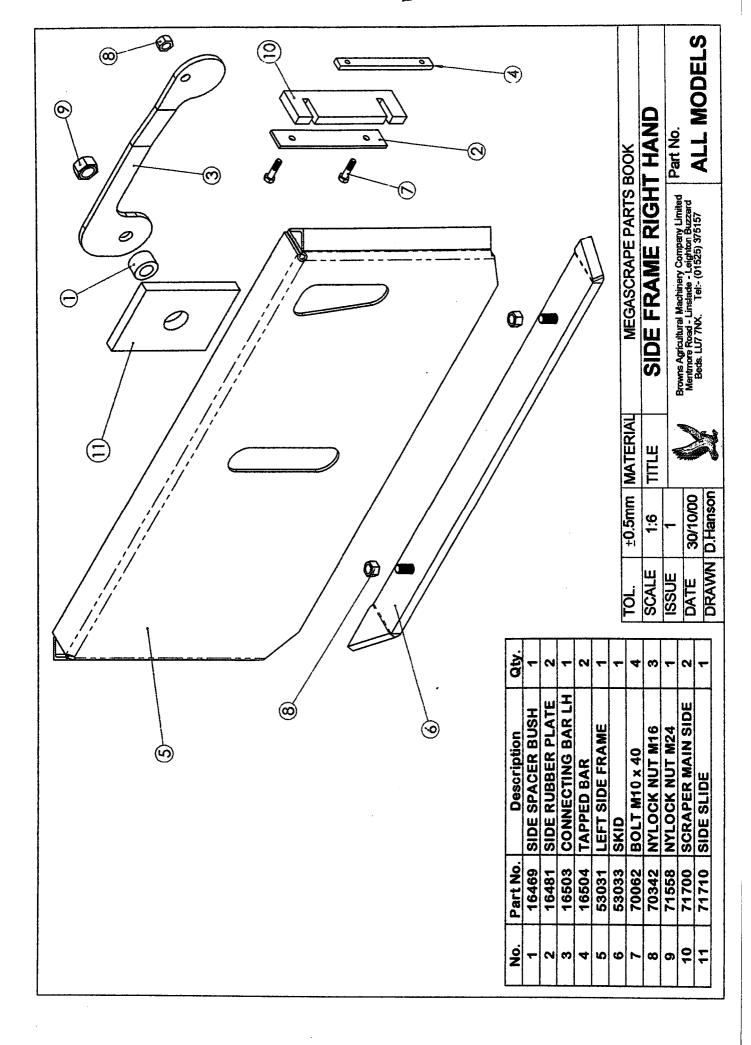





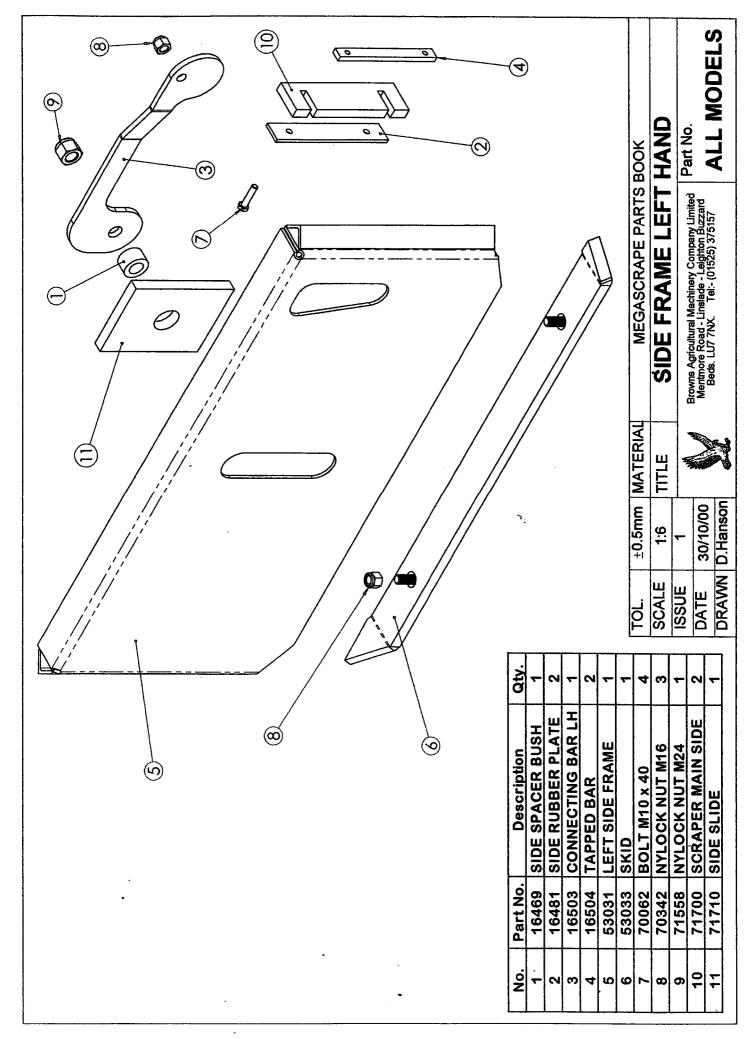

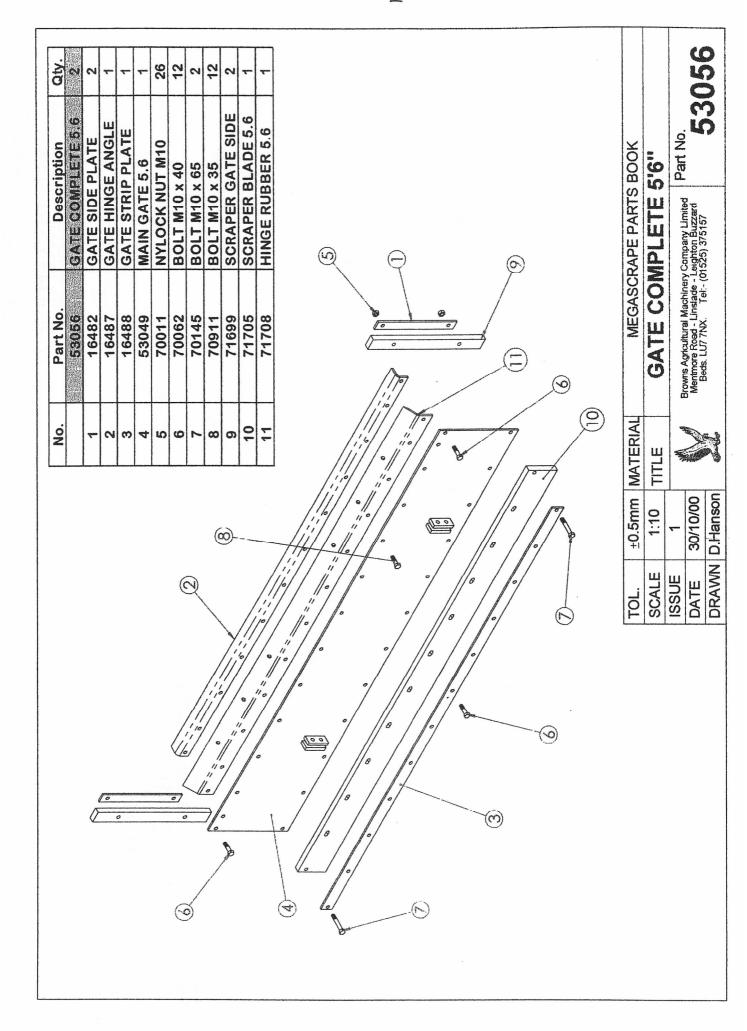

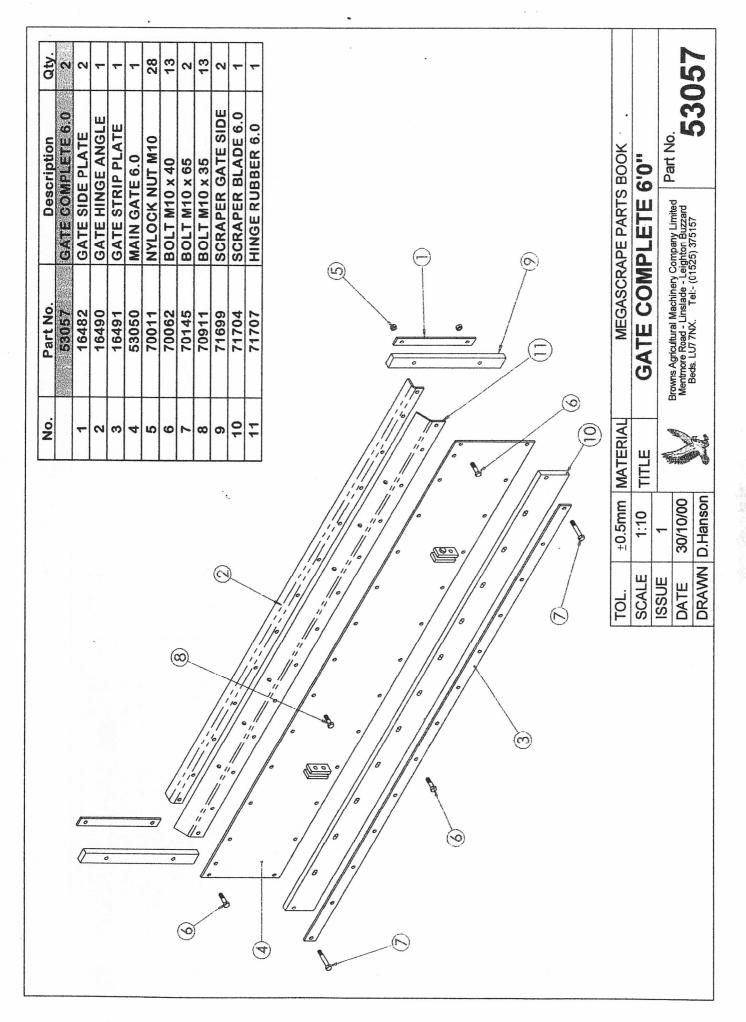

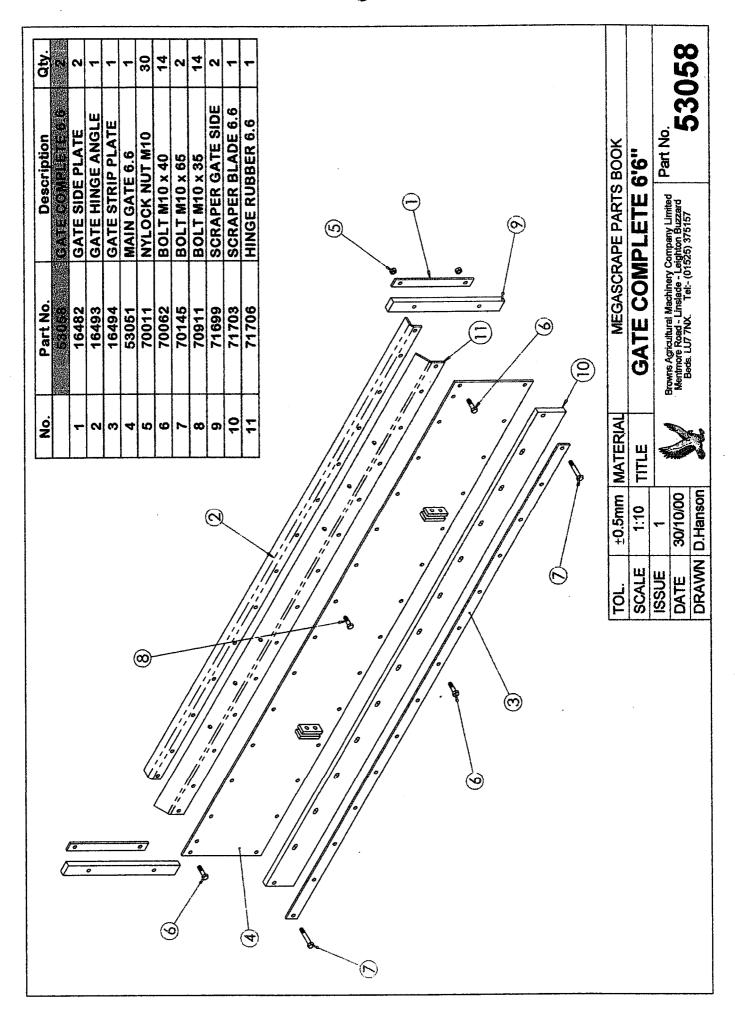

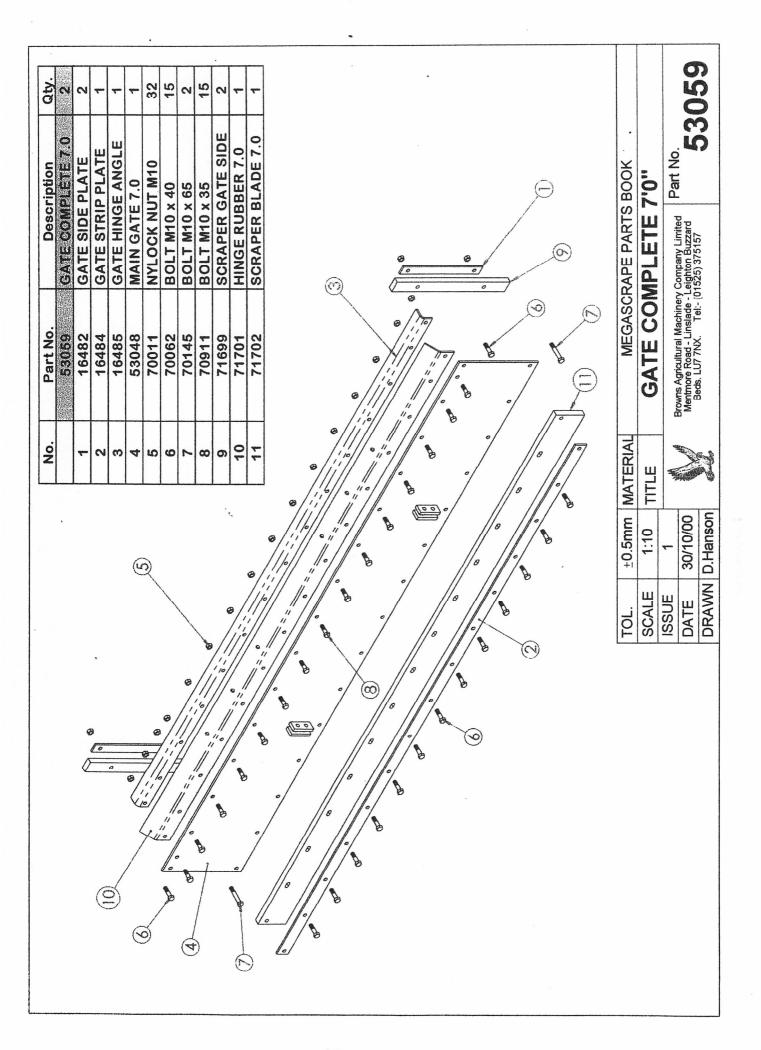



## EC DECLARATION OF CONFORMITY

Manufacturer

Browns Agricultural Machinery Co. Ltd.

Description of Machinery

MEGASCRAPE Muck Scraper (6'6")

Model Number

66160

This machine complies with EC Directives, Transposed Harmonised Standards, National Standards and Technical Specifications as follows:

89/392/EEC 91/386/EEC 93/44/EEC 93/68/EEC EN 292 pr EN 691

The machinery has been designed taking into account the essential Health & Safety Standards as detailed in the Supply of Machinery (Safety Regulations) 1992.

For and on behalf of the Manufacturer

Name

J. W. G. BROWN

Status

MANAGING DIRECTOR

The above machinery taking into account the state of art, complies with or is designed and constructed so far as possible, to comply with the relevant Health & Safety requirements as indicated in the Technical file.

THE COMPANY IS CONTINUALLY STRIVING TO IMPROVE ITS PRODUCTS AND RESERVES THE RIGHT TO MAKE IMPROVEMENTS OR CHANGES WITHOUT INCURRING ANY OBLIGATION TO ALTER ANY OF ITS MACHINES PREVIOUSLY SOLD.